

How to change the cutting blade of Swordfish 40051electric pencil sharpener

①

Remove the screws

②

Remove the screws

③

Remove the screws

④

Switching parts

⑤

Take off of the Gear A

⑥

Remove the cutter pin

⑦

Remove the cutter pin

⑧

Remove the cutter pin

⑨

Change the cutting blade

Please take care about the direction of the lead stopper. The side with taper should be in left side in abofe image photo.

Note

- ◎Please be sure to unplug before these actions.
- ◎Please be sure to work in the order from ① to ⑨ for changing the cutting blade.
- ◎Please install the parts back in order from ⑨ to ①.