

Please read the following instructions before operating your sharpener.




MiniPro Dual Power Pencil Sharpener Operating Instructions

● To be used under adult supervision only.

Model	Product Code	Replacement Blade Code	Compatible Pencil Size(s)
MiniPro	40245	40246	8mm

- 1 Insert 4 x AA batteries or the USB cable supplied.
- 2 Insert a pencil. The sharpener will start automatically.
- 3 Hold the pencil firmly, but do not apply firm pressure. Let the sharpener do the work! This is especially important with soft crayon, charcoal or pastel pencils.
- 4 Remove the pencil when sharp and the sharpener will stop automatically.
- 5 **Do not allow the shaving tray to over-fill. This can cause serious damage to the sharpener!**

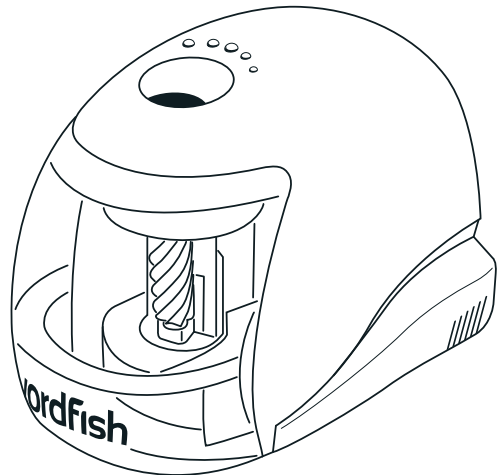

Replacement Blades

In common with any other sharpener, the blade in your MiniPro will eventually become blunt. The product code for the replacement blade is **40246**. Fitting instructions can be found on www.snopakebrands.com.

Caution

- Adult supervision required.
- Do not insert a finger into the sharpener as this may cause injury.
- This is a pencil sharpener. Do not insert any other object.
- Do not immerse this sharpener in water.

Precautions when using batteries

- Batteries should be installed by an adult.
- Observe correct polarity when installing batteries, as indicated by the "+" and "-" signs inside the battery compartment.
- Do not use old and new batteries together.
- Batteries of the same type should always be used.
- Do not leave batteries in the sharpener for extended periods as leakage may occur.
- Always dispose of old batteries responsibly.

Cleaning

To empty the shaving tray, hold the sharpener vertically over a bin before removing the shaving tray.

Safety Feature

The sharpener will not operate unless the shaving tray is replaced correctly.

