


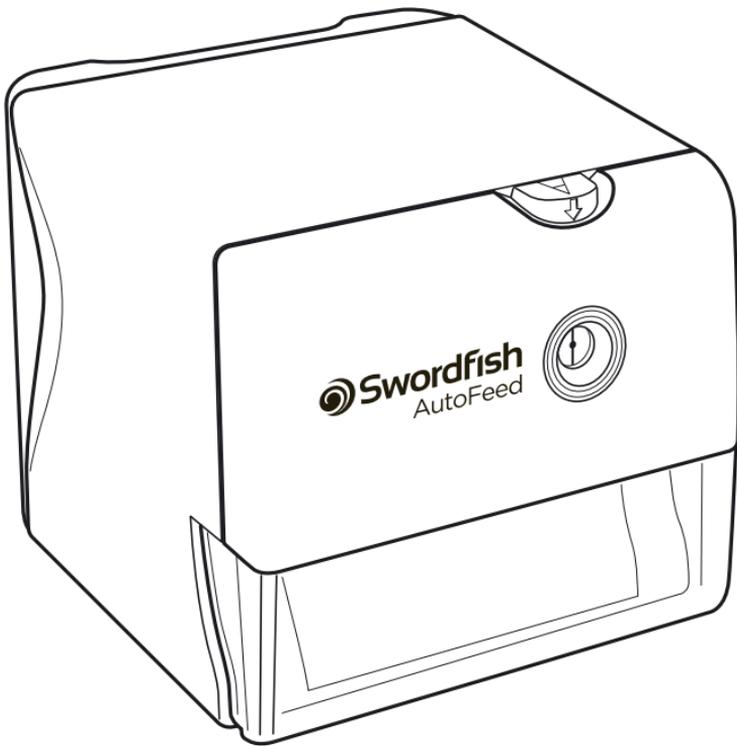

AutoFeed


Electric Pencil Sharpener



Operating Instructions

Please read the following instructions before operating your sharpener.

Features

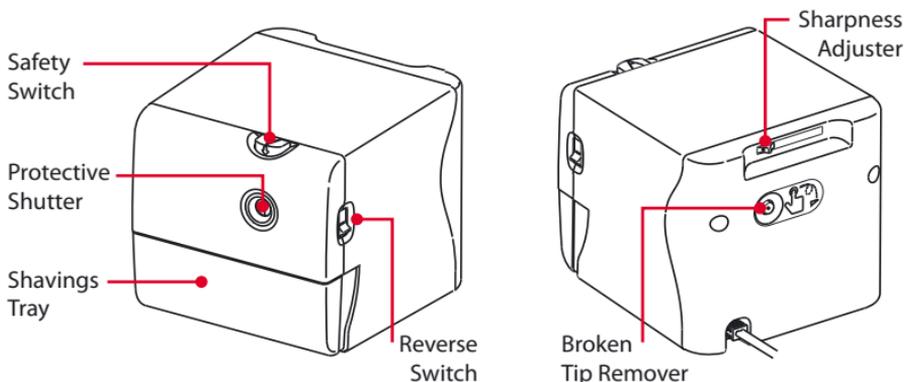

Operating Instructions

1. Select the desired pencil point sharpness by sliding the adjuster at the back of the machine. (Fig.1)
 2. Press the safety switch on top of the sharpener to open the safety shutter.
 3. Insert the pencil until it is engaged by the mechanism. The motor will start and the pencil will be automatically drawn into the sharpener. (Fig.2)
 4. When the selected sharpness has been achieved, the pencil will be automatically reversed out of the sharpener.
 5. The shavings tray can be removed by sliding it out horizontally from the body of the machine.
- ⚠ Do not allow the shavings tray to overflow as this can cause serious damage to the sharpener mechanism.**
6. This sharpener should not be used continuously for more than 60 minutes, after which it should be allowed to cool down for at least ten minutes. Exceeding 60 minutes continual use will shorten the working life of this machine.

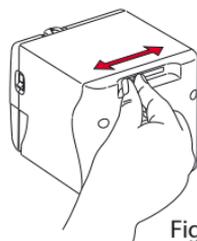


Fig.1

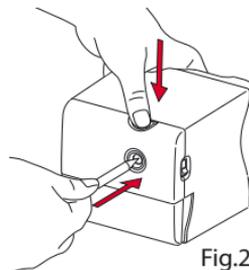


Fig.2

Note

If the pencil is quite short, it may become trapped behind the safety shutter. If this occurs, slide the reverse switch upward. The safety shutter will open and the pencil stub will be reversed out of the machine (Fig.3). Please do not attempt to sharpen pencils less than 50mm long as they will become trapped.

Sharpening coloured pencils can cause a waxy deposit to build up on the blade. We recommend alternating between coloured and graphite pencils as graphite, a natural lubricant, will help to keep the blade clean.

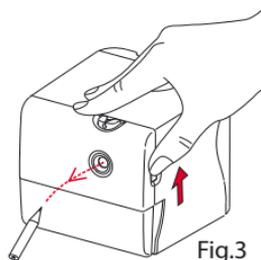


Fig.3

Replacement Blades

As with all sharpeners, frequent use will eventually blunt the sharpener blade.

Please be aware that Pastel pencils are very abrasive and will cause the blade to wear more rapidly than other types of pencil.

The automatic pencil feed mechanism is subject to wear. For a service kit comprising a replacement blade assembly and a pencil feed mechanism, please contact your supplier quoting code **40328**.

To download fitting instructions for these parts, please visit www.snopakebrands.com.

Broken tip removal

If a pencil point breaks off inside the sharpener, first press the broken tip remover button on the back of the sharpener (Fig.4), then invert the machine and press the safety switch to open the safety shutter (Fig.5).

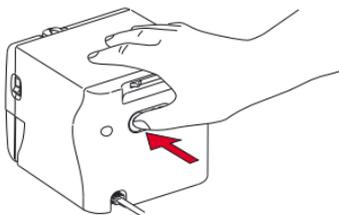


Fig.4


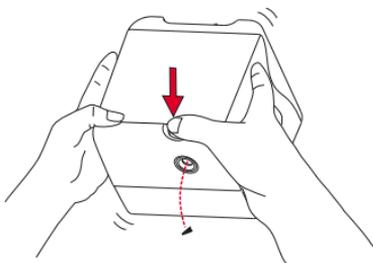


Fig.5

Safety Features

- The sharpener has a safety shutter to help prevent small children inserting their fingers into the sharpener.
- The sharpener has a safety interlock that prevents the machine from operating unless the shavings tray is firmly in place.
- The sharp edges of the helical blade are shielded to prevent access by children's fingers. (Fig.6)

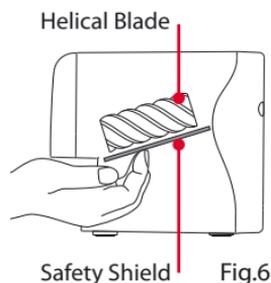

Safety Precautions

1. Adult supervision required. This sharpener is not a toy.
2. Operate the sharpener on a level surface close to an easily accessible socket outlet.
3. Disconnect the plug from the socket outlet when the sharpener is not in use, or during cleaning.
4. Do not use aerosol products on, or near, this machine. Do not allow water to enter the sharpener - clean with a moist cloth only.

Product Specifications

Swordfish UK Product Code	40327	Shavings Tray Capacity (pencils)	15
UK Barcode (for individual unit)	5019118809701	Auto Stop	✓
Packaging	Box of 1	Pencil Point Options	✓
Pencil Size (mm)	8	Jam Eject Button	✓
Blade Type	Helical (replaceable)	Safety Cut Out	✓
Replaceable Blade Code	40328	Auto On/Off	✓
Time to sharpen one pencil (seconds)	12	Weight inc pack (g)	1004
No. of new pencils sharpened per minute	4	Dimensions of pack H x W x D (mm)	115 x 182 x 124
Noise Level	62dB	Product Warranty (years)	2

Full product specifications can be found on www.snopakebrands.com

For troubleshooting and product support,
please visit www.snopakebrands.com