




# 5-in-1 Creative Trimmer

Multi-blade folding paper trimmer



To download or view these instructions in other languages please scan the QR code or visit [www.snopakebrands.com](http://www.snopakebrands.com)



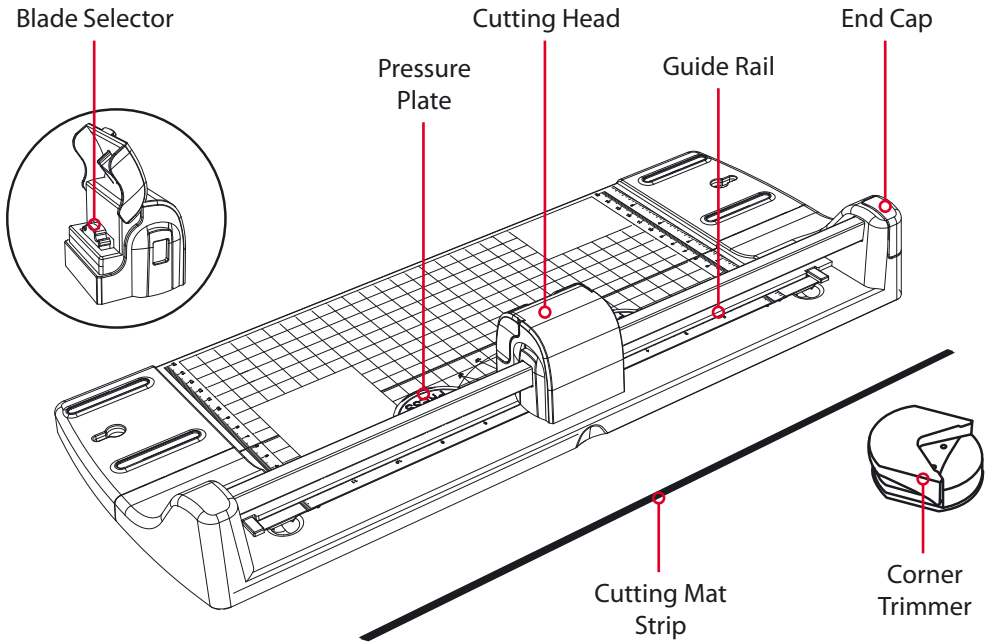


For further information  
or to register your product  
visit [www.snopakebrands.com](http://www.snopakebrands.com)



SCAN ME




<h2>SPECIFICATIONS</h2>	
Colour	White & Purple
Suitability	
	Home
Swordfish Product Code	40343
Maximum Paper Size	A4
Cutting Length (mm)	320
Sheet Capacity (Based on 80gsm paper)	Straight Cut - Up to 8 Sheets Wavy Cut - Up to 5 Sheets Perforated Line - Up to 5 Sheets Score Line - Up to 1 Sheet Corner-Trim - Up to 5 Sheets
Replacement Cutting Head Code	40344
Replacement Cutting Strips Code	40346 (pack of 3)
Replacement Corner Trimmer Code	40345
Product Warranty (years)	2

This space-saving rotary 5-in-1 Creative Trimmer will enable you to make straight cuts, wavy cuts, perforations and score-lines with ease. The cutting head holds four different rotary blades – changing from one to another is quick and easy. The removable corner-trimmer produces neat round corners on your work. And – when you have finished, the Creative Trimmer folds away for easy storage!

# Operation


**1** Remove any staples or paper-clips from the paper that you wish to cut.

**2** Unfold the baseplate and set it on a stable worktop.

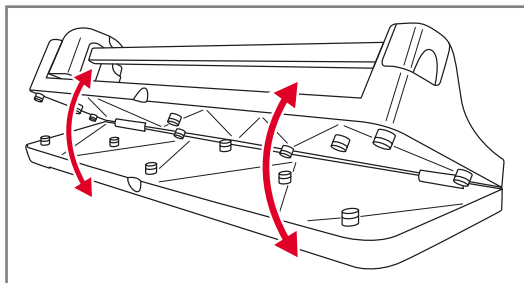


**3** Open the transparent cover on the cutting head and select the desired blade by rotating the silver thumb-wheel.

**4** Closing the transparent cover will lock the desired blade in place. If the cover does not close completely, please adjust the thumbwheel.

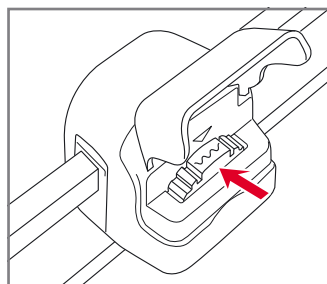

**5** Slide the cutting head to one end of the guide rail.

**6** Position the paper under the transparent pressure-plate.

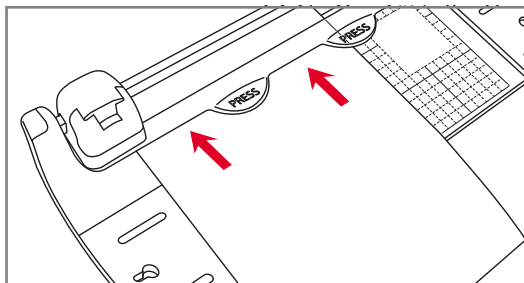


## Operation continued


**7** Use one hand to press down on the pressure-plate, to hold the paper in place.

**8** With the other hand, press down firmly on the cutting head whilst sliding it along the guide-rail.

**Note:** increased pressure will be required when cutting multiple sheets of paper

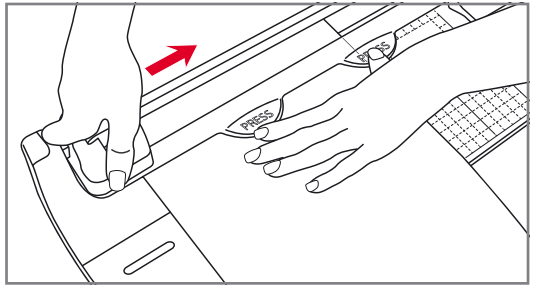


## Helpful Hints

-  Do not exceed the stated capacity of each blade as this will damage the trimmer and produce inaccurate cuts
- For precise work, cut as few sheets at a time as possible
- Always perform some test cuts – especially when cutting a new material
- For best results, press down firmly on the cutting head then slide it slowly and steadily


## Using the Corner Trimmer

The corner-trimmer supplied is attached to the trimmer by a hook-and-loop fastener, so that it is always handy. It will produce a neat, rounded corner on up to 5 sheets of 80gsm paper at a time.

- 1** Remove the corner-trimmer from the Creative Trimmer and place it on a stable work-top.

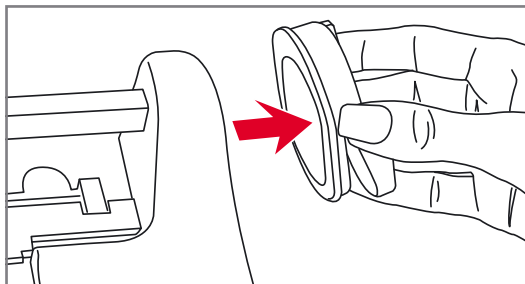

- 2** Insert the paper into the silver corner.

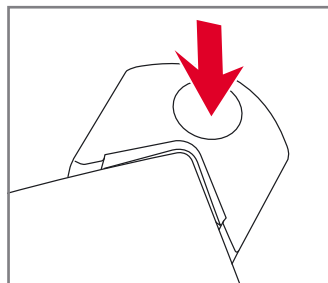

- 3** Press down firmly on the raised boss.


- 4** Waste clippings will be collected in the corner-trimmer. To empty, turn the corner-trimmer upside-down and remove the clear base.

## Replacing the Cutting Head


Even the blades in a Swordfish trimmer will eventually become dull and require replacement. New cutting heads, fully assembled and complete with four blades, are available from your usual Swordfish dealer (the product code is 40344).

# Replacing the Cutting Mat Strip

The rotary blades run on a replaceable cutting-mat strip. In time, this will wear and require replacement. However it will have a long life as it can be both rotated and flipped. To remove or replace the cutting mat:

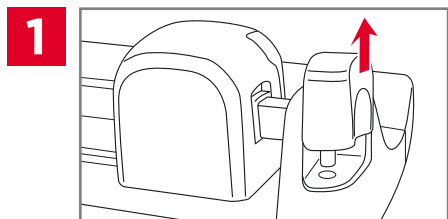


1 Remove the guide-rail end-stop by sliding it upwards

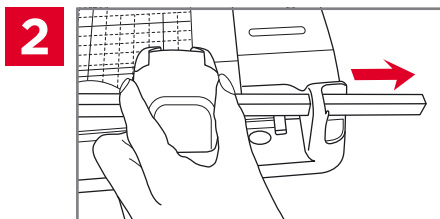


2 Remove the guide rail and cutting head.



Caution – do not touch the blades – they are extremely sharp!

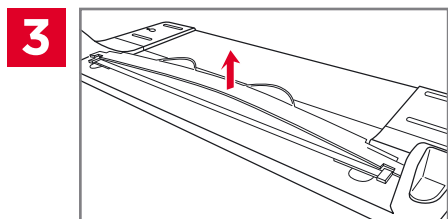

3 Lift and remove the transparent pressure-plate

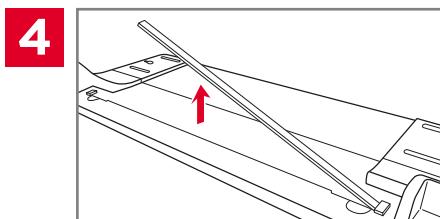

4 The cutting mat can now be removed and rotated or replaced

5 Note that a replacement cutting-mat strip is packed inside the guide rail. Further cutting strips are available in packs of 3, code 40346.

When re-assembling your Swordfish 5-in-1 Creative Trimmer, please ensure that the transparent pressure-plate is correctly located and that the rotary blades are running on the cutting mat, not on the pressure-plate.

# Have you seen the rest of the Swordfish range?

## Pencil Sharpeners



The Triple



Pointi



VariPoint

## Paper Shredders



800XC



1200XXCD

## Document Laminators



SuperSlim Series A4



HyperSpeed A3

To find out more information on the full range of products, visit us at [www.snopakebrands.com](http://www.snopakebrands.com)

