

Step By Step Guide - Mechanical Pencil Sharpener Maintenance 2 - How to remove and completely dismantle the blade mechanism

STEP 1

Twist the black locking-ring a quarter-turn anti-clockwise in order to remove the blade assembly.



STEP 2

The blade assembly removed from the sharpener.



STEP 3

Unscrew the blade assembly from the handle.




STEP 4

Withdraw the blade assembly from the black ring.



STEP 5

Remove the wire clip and withdraw the shaft.

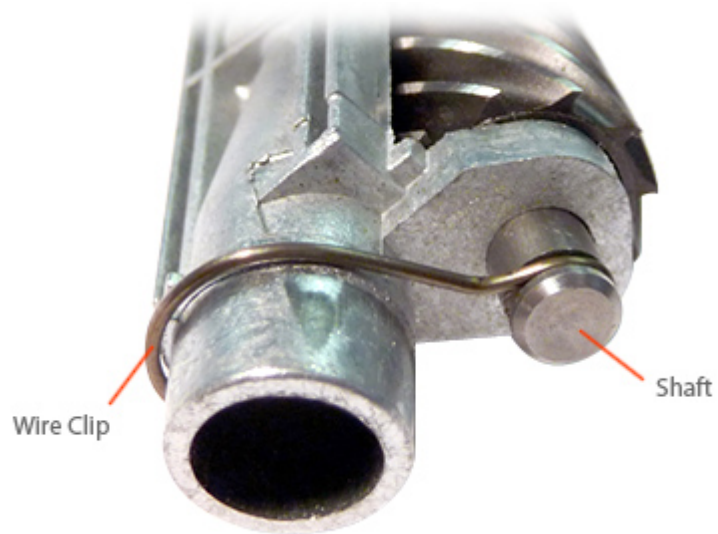

STEP 6

The blade assembly components ready for cleaning and reassembly.

CAUTION: The helical blade has sharp edges - handle with care!

