How to change the cutting blade of Swordfish 40052 electric pencil sharpener

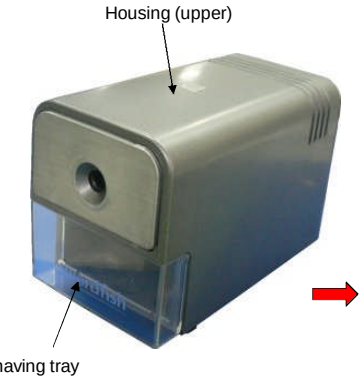

①

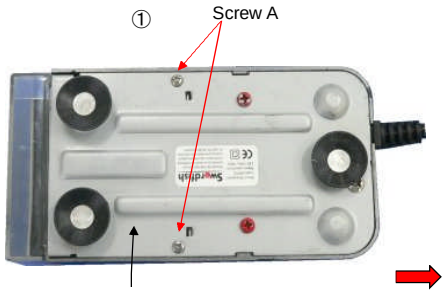

②

③

hold and remove the upper housing from the power code part, and remove the upper housing completely from the base plate.

④

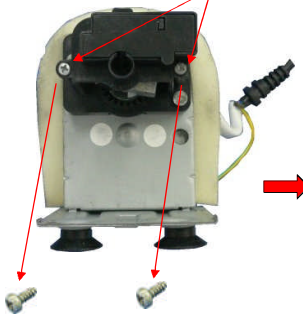

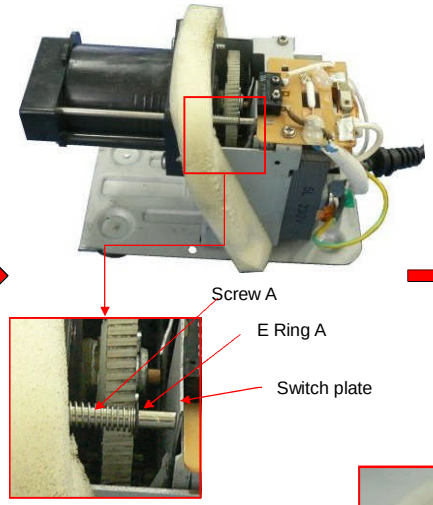

⑤

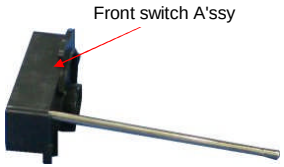



※Remove spring A and E ring A, Please take care that don't make the switch plate to be deformed.

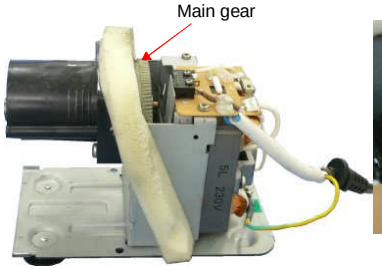

⑥

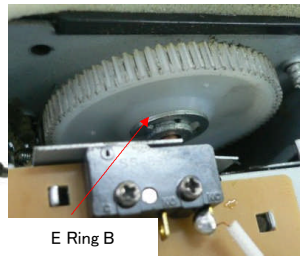

※Remove E ring B, and take care that don't make the switch plate to be deformed.

⑦

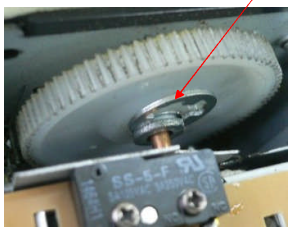

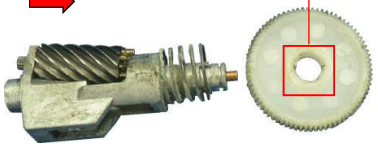

Take the cutter A'ssy out from the machine

Be sure that set up the main gear in correct direction.

⑧

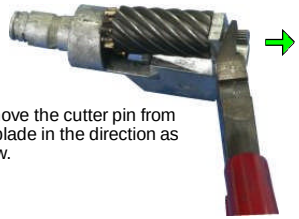

Remove the cutter pin from the blade in the direction as arrow.

⑨

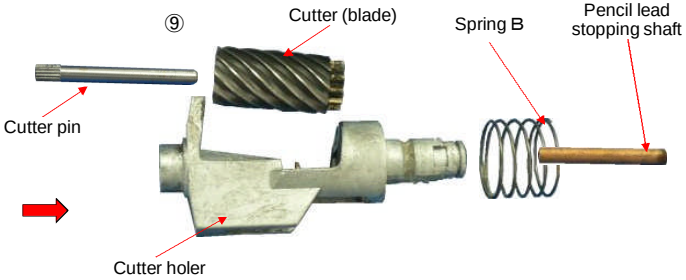

Note

※Please be sure to unplug before these actions.
※Please follow the instruction of ①～⑨ for each step.
※Please do not touch the cutting blade by hand as it may hurt your hand.
※Please push back stronger when you put the cutter pin back to the cutter (blade).
※After changing the cutter (blade), please work in the order of ⑨～①.